

ER 型 (ISO 15488, DIN 6499)

用于 RF103 型攻丝刀柄的 ER8 型夹套

单位: mm

丝锥尺寸		丝锥刀柄 直径d1	型号	H4	D2	推荐 扳手
公制螺纹	统一标准螺纹					
M1 ~ M2.6	U No.0 ~ U No.4	3	ER8-3	13.5	8.0	ES8M
M3 ~ M3.5	U No.5 ~ U No.6	4	ER8-4			

用于 RF306 型攻丝刀柄的 ER11 型夹套

单位: mm

丝锥尺寸		丝锥刀柄 直径d1	型号	H4	D2	推荐 扳手
公制螺纹	统一标准螺纹					
M3 ~ M3.5	No.5 ~ U No.8	4.0	ER11-4	18.0	11.5	ES11M
M4 ~ M4.5	No.8	5.0	ER11-5			
M5 ~ M5.5	No.10 ~ U No.12	5.5	ER11-5.5			
M6	U 1/4	6.0	ER11-6			

用于 RF414 型攻丝刀柄的 ER20 型夹套

单位: mm

丝锥尺寸		丝锥刀柄 直径d1	型号	H4	D2	推荐 扳手
公制螺纹	统一标准螺纹					
M4 ~ M5	No.8	5.0	ER20- 5	31.5	21.0	ES20M
M5 ~ M5.5	No.10 ~ No.12	5.5	ER20- 6			
M6	U 1/4	6.0	ER20- 6			
	U5/16	6.1	ER20- 7			
M7 ~ M 8		6.2	ER20- 7			
M9 ~ M10	U 3/8	7.0	ER20- 7			
M11	U7/16	8.0	ER20- 8			
M12		8.5	ER20- 9			
	U 1/2	9.0	ER20- 9			
M14	U9/16	10.5	ER20-11			

用于 RF414-OHC 型攻丝刀柄的 ER20-GB 型夹套


单位: mm

丝锥尺寸		丝锥刀柄 直径d1	型号	H4	D2	推荐 扳手
公制螺纹	统一标准螺纹					
M4 ~ M5	No.8	5.0	ER20- 5	31.5	21.0	SP-ER20
M5 ~ M5.5	No.10 ~ No.12	5.5	ER20- 5.5			
M6	U 1/4	6.0	ER20- 6.0			
M7 ~ M 8		6.2	ER20- 6.2			
M9 ~ M10	U 3/8	7.0	ER20- 7.0			
M12		8.5	ER20- 8.5			
	U 1/2	9.0	ER20- 9.0			
M14	U9/16	10.5	ER20-10.5			

用于 RF414-OHC 型攻丝刀柄的 DS/ER20 型密封盘


单位: mm

丝锥尺寸		丝锥刀柄 直径d1	型号	A	B
公制螺纹	统一标准螺纹				
M4 ~ M5	No.8	5.0	DS/ER20- 5	16	4.0
M5 ~ M5.5	No.10 ~ No.12	5.5	DS/ER20- 5.5		
M6	U 1/4	6.0	DS/ER20- 6.0		
M7 ~ M 8		6.2	DS/ER20- 6.5		
M9 ~ M10	U 3/8	7.0	DS/ER20- 7.0		
M12		8.5	DS/ER20- 8.5		
	U 1/2	9.0	DS/ER20- 9.0		
M14	U9/16	10.5	DS/ER20-10.5		

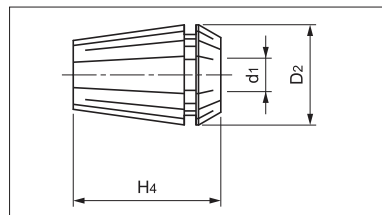


※请注意, RF 型攻丝刀柄的标准配置中不包括 ER 型夹套和 ES-M 型扳手。

※带内方孔的 ER 夹套 (ER-GB 型) 也适用于 RF414 型攻丝刀柄。

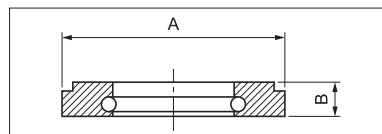


选购件: RF 型的专用扳手



RF 型的专用扳手

单位: mm

型号	A	B	推荐的攻丝刀柄
ES 8M	12.4	70	RF103
ES11M	16.8	90	RF306
ES20M	29.0	120	RF414



RF-OHC 型的专用扳手

单位: mm

型号	A	B	推荐的攻丝刀柄
SP-ER20	52.5	172	RF414-OHC

